


Installing Reusable Fittings


As you can see from the sketch next to the text, the re-usable fitting is made out of three parts.

To mount, please proceed as follows:


1. Fit body (1), slightly lubricated with silicon free mineral oil onto hose (2) by turning (1) with appropriate sized wrench **anti clockwise** until tight.
2. Turn back **clockwise** one full turn (360°) to provide space for expansion.
3. Slide nipple (3) trough the nut (4)
4. Hold body (1) in place with a vice and screw nipple (3) **clockwise** into hose (2) using appropriate Allen key.
5. Check that nut (4) turns freely

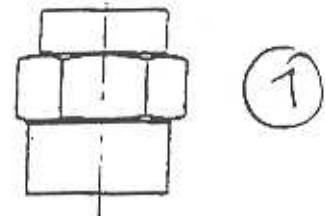


①

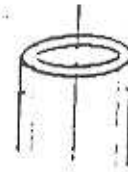


②

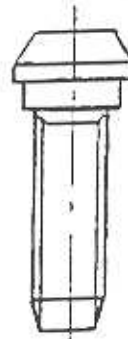

③

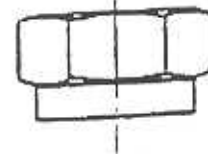

④

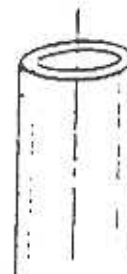

②

NOTE: HOSE MAY BE SHORTENED &
FITTINGS PUT BACK ON IF
NECESSARY